


## RT-2M (90007891000) Quick Start Guide



**INCLUDED PARTS:**

- RT-2M Unit
- DB-9 Cable

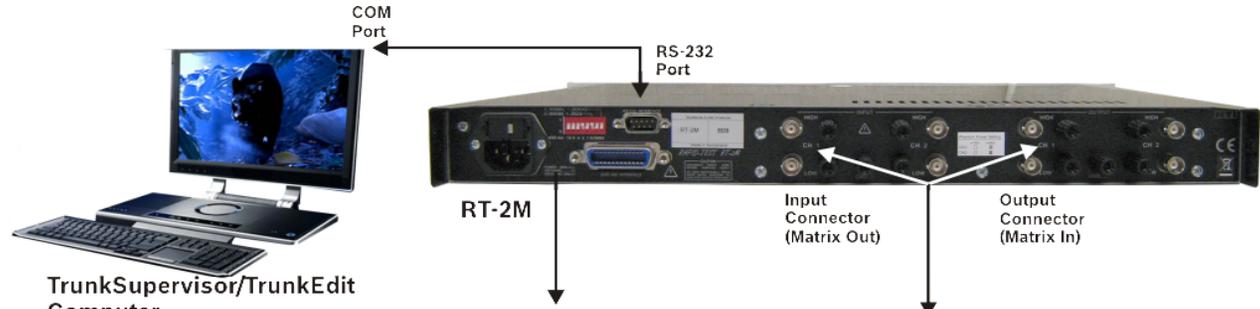

COM Port

RS-232 Port

RT-2M

Input Connector (Matrix Out)

Output Connector (Matrix In)

DIP switch 6 on, All others, off.

To the appropriate Frame connector

- ADAM
- ADAM CS
- Zeus
- ZeusII
- Cronus

TrunkSupervisor/TrunkEdit Computer

**NOTE:** See the entire system diagram on reverse side.

### RS-232 Cable Pinout

RT-2M DB-9 FEMALE	TRUNK SUPERVISOR DB-9 FEMALE
2	3
3	2
5	5
7	8
8	7

**Step 1.** Cable the Trunk Supervisor/TrunkEdit PC to the RT-2M.

**NOTE:** In Trunk Supervisor, you must designate the intercom and port number the RT-2M sends the test signal over.

To cable the Trunk Supervisor/TrunkEdit PC to the RT-2M, do the following:

- Using the included cable, connect a **COM port** on the Trunk Supervisor computer to the **RS-232 Interface connector** on the rear panel of the RT-2M.

**Step 2.** Cable the RT-2M to the Frame.

To cable the RT-2M to the Frame, do the following:

- Using the appropriate connector defined below, connect the **RT-2M** to the Frame:

CONNECTOR	CONNECTION
RJ-12	• Plug <b>pins 2 and 5</b> into the Ch 1 input connector terminals.
	• Plug <b>pins 3 and 4</b> into the Ch 1 output connector terminals.
DB-9	• Plug <b>pins 7 and 8</b> into the Ch 1 input connector terminals
	• Plug <b>pins 4 and 5</b> into the Ch 1 output connector terminals.

- Connect the **other end of the connector** to the trunking connection port as defined in the Trunk Supervisor software.

# RTS Digital Matrix Intercom

Innovating the Future of Communications

