

## ATTENTION ZEUS II USERS


The original Zeus manual ships with the Zeus II. This information sheet provides information that is relevant to Zeus II users only. If the front of the unit does not have the Zeus II logo, the unit is an original Zeus.

The Zeus II has the following additional features:


- There are two power supplies and therefore two cord connections on the rear of the unit.
- Simply plug the power cords to turn the unit ON.
- There are two additional LEDs (PS1 & 2) on the front panel which indicate the status of the power supplies.
- There is an additional connector (J28) which is used along with an RS-232 to RS-485 converter (not supplied) for trunking.

Below are figures that point out the Zeus II's features. Located on the back of this sheet is a diagram providing specific information regarding the connection of the Zeus II in a trunked system, as well as, software configuration information regarding trunking.

### Front View

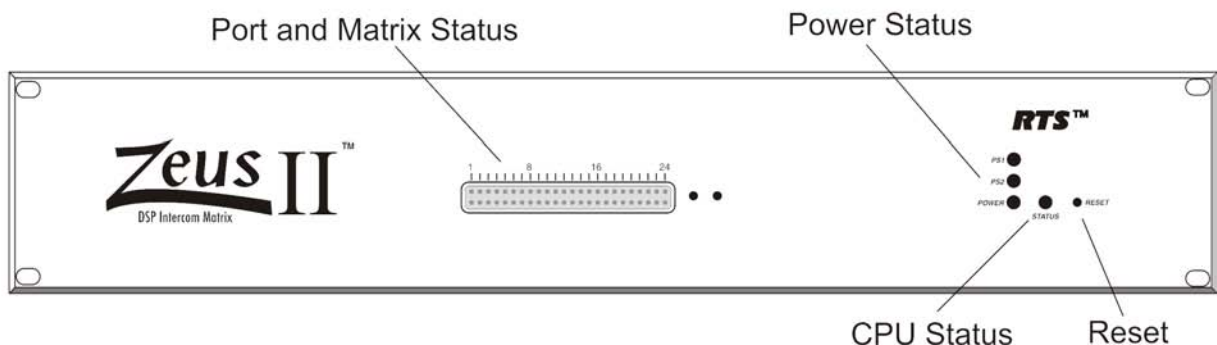


### Rear View

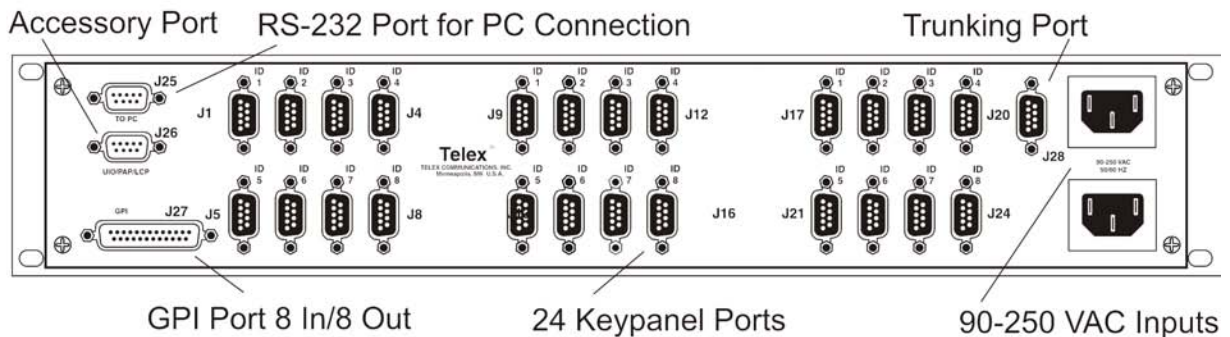

# RTS® Digital Matrix Series

## Intercom Systems

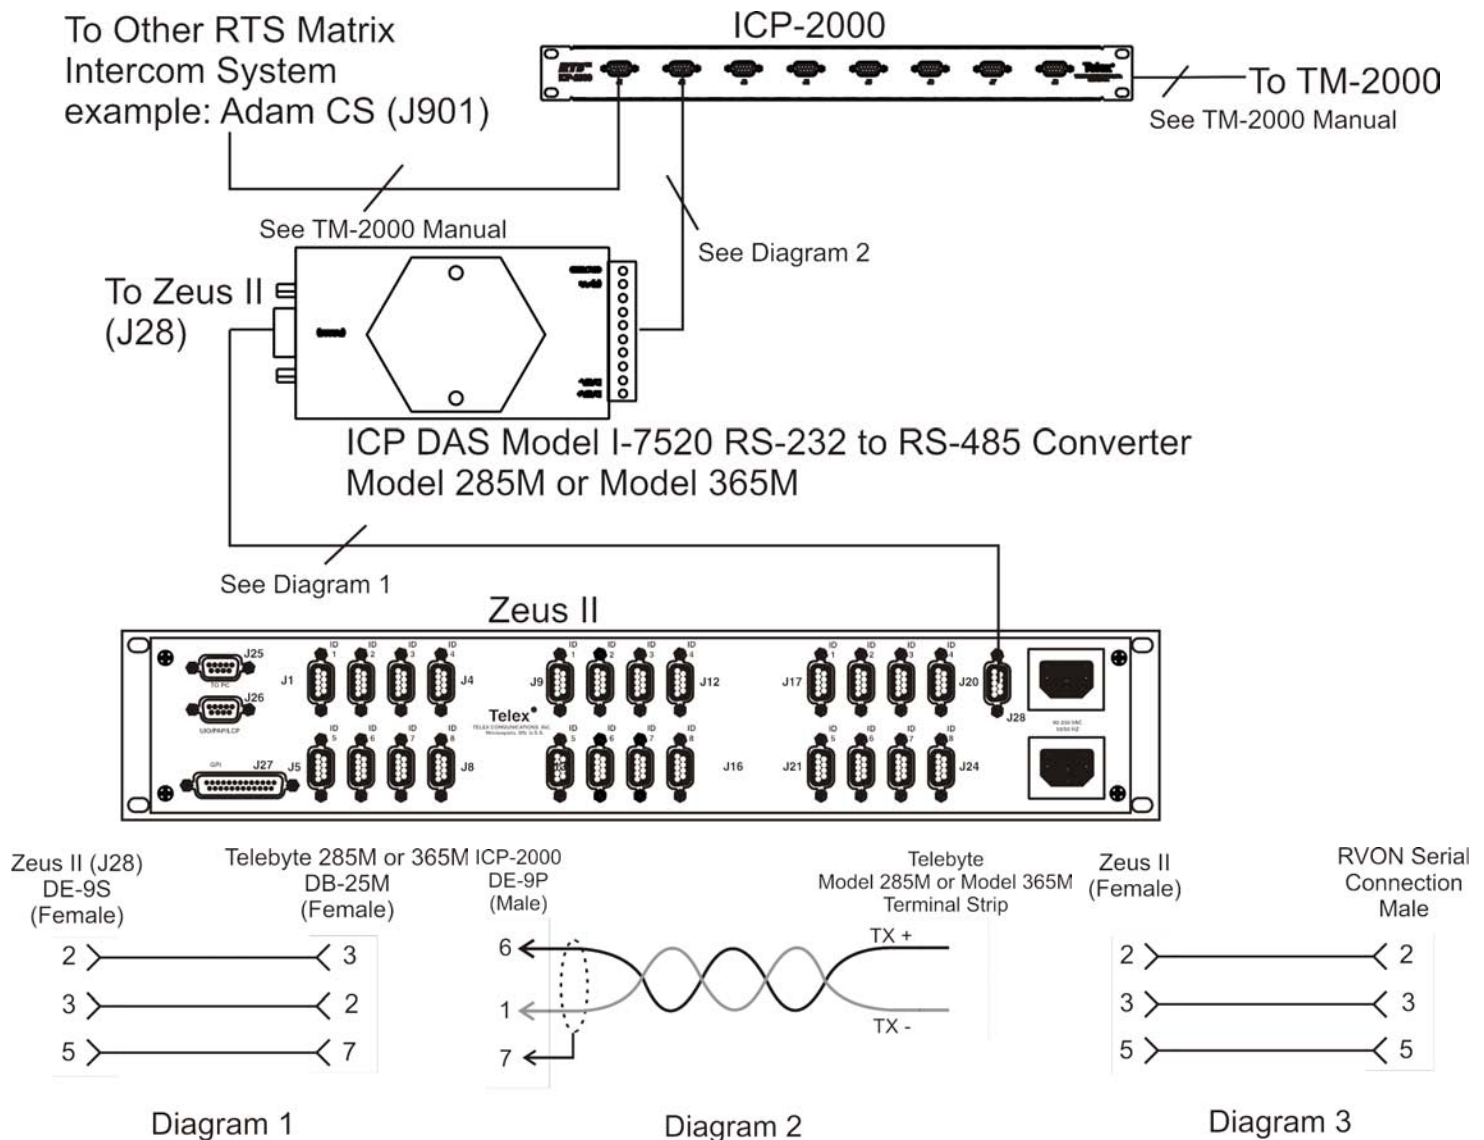

To Setup the Zeus Edit software for trunking do the following:

### Step 1

1. Select Intercom Configurations located under the |Options| menu.
2. Click on the Options tab.
3. Make sure there is an X mark next to the "Allow for remote trunk master" entry.
4. Click on Apply.

### Step 2

1. Select Preferences located under the |Options| menu.
2. Click on the Advanced tab.
3. Make sure there is an X mark next to the "Enable trunking support" entry.
4. Click on OK.

**NOTE:** The Zeus II communicates at 9600 baud with the Trunk Master (TM-2000). Be sure to configure the communications in the Trunk Edit software for 9600 baud. For further information on trunking, consult the TM-2000 User Manual.

ICP DAS Model I-7520 Converter can be obtained from:

**ICP DAS USA, Inc.**  
1508 Pacific Coast Highway  
Harbor City, CA 90710  
Phone: 310-517-9888